

Strain Gage Adhesive



OTHER ACCESSORIES USED IN AN M-BOND 610 INSTALLATION:

- CSM Degreaser or GC-6 Isopropyl Alcohol
- Silicon-Carbide Paper
- M-Prep Conditioner A
- M-Prep Neutralizer 5A
- GSP-1 Gauze Sponges
- CSP-1 Cotton Applicators
- MJG-2 Mylar® Tape
- TFE-1 Teflon® Film
- HSC Spring Clamp
- GT-14 Pressure Pads and Backup Plates


RoHS
COMPLIANT

DESCRIPTION

Two-component, solvent-thinned, epoxy-phenolic adhesive for high-performance applications, including high-precision transducers. Solids content 22%. Widest temperature range general-purpose adhesive available. Low viscosity, capable

of gluelines <0.0002 in [0.005mm]. Extremely thin, hard, void-free gluelines minimize creep, hysteresis, and linearity problems. Cure must begin within four hours of application.

CHARACTERISTICS

Operating Temperature Range:

Short Term: -452° to +700°F [-269° to +370°C].

Long Term: -452° to +500°F [-269° to +260°C].

Transducers: to +450°F [+230°C].

Elongation Capabilities:

1% at -452°F [-269°C];

3% at +75°F [+24°C];

3% at +500°F [+260°C].

Shelf Life:

9 months at +75°F [+24°C]; 15 months at +40°F [+5°C].

Pot Life:

6 weeks at +75°F [+24°C]; 12 weeks at +40°F [+5°C].

Clamping Pressure:


10 to 70psi [70 to 480kN/m²].

30 to 40psi optimum [200 to 275kN/m²].

Cure Requirements:

Recommended Postcure: 2 hours at 50° to 75°F [30° to 40°C] above maximum operating temperature or cure temperature, whichever is higher.

High Precision Transducer Postcure: 2 hours at +400° to +450°F [+205° to +230°C] after wiring.

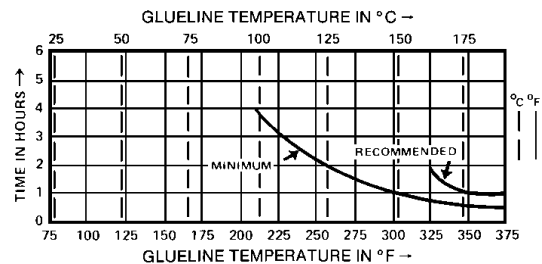

PACKAGING OPTIONS

Kit:

- 4 bottles [11g ea] Curing Agent
- 4 bottles [14g ea] Resin
- 4 brush caps for dispensing mixed adhesive
- 4 disposable mixing funnels

Single Mix Kit:

- 1 bottle [11g ea] Curing Agent
- 1 bottle [14g ea] Resin
- 1 brush cap for dispensing mixed adhesive
- 1 disposable mixing funnel

References: Instruction Bulletin B-130, "Strain Gage Installations with M-Bond 43-B, 600 and 610 Adhesive Systems," included in each kit.

Mylar and Teflon are Registered Trademarks of DuPont



Notice

Specifications of the products displayed herein are subject to change without notice. Vishay Intertechnology, Inc., or anyone on its behalf, assumes no responsibility or liability for any errors or inaccuracies.

Information contained herein is intended to provide a product description only. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Vishay's terms and conditions of sale for such products, Vishay assumes no liability whatsoever, and disclaims any express or implied warranty, relating to sale and/or use of Vishay products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright, or other intellectual property right.

The products shown herein are not designed for use in medical, life-saving, or life-sustaining applications. Customers using or selling these products for use in such applications do so at their own risk and agree to fully indemnify Vishay for any damages resulting from such improper use or sale.